


金属按钮开关



金属按钮型号说明 Selection guide

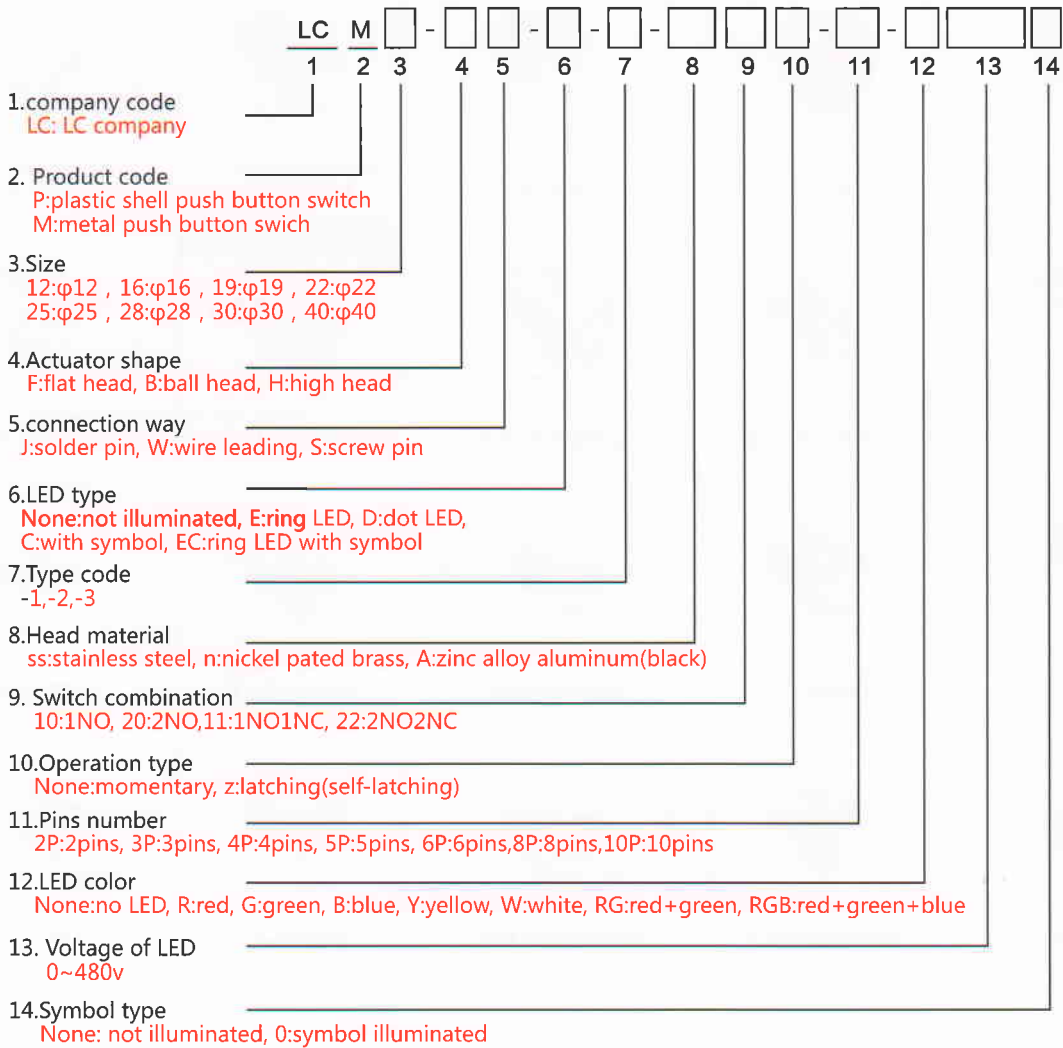

金属按钮开关



金属按钮开关



金属按钮开关



LCM19-RSJ



LCM19-KJ



LCM19-FS-D



LCM19-FS



LCM19-HJ



LCM19-HJ-E-T



LCM19-HJ-E-2



LCM19-FS-E



LCM19-HS-T



LCM19-FJ



LCM19-BJ-T



LCM19-FJ-E-T



LCM19-FJ-E-1



LCM19-FW-EC



LCM19-FW-E-L



LCM19-FW-E-T



LCM22-FJ-D



LCM22-HJ-E-T



LCM22-BS



22mm

LCM22-FJ-E-T



LCM22-HS



LCM22-FJ-E



LCM22-FJ-EC



LCM22-HJ



LCM22-BJ



LCM22-FS



LCM22-FJ



LCM22-FJ-C



LCM22-FJ-E-1



LCP22-FW-E

金属按钮开关



LCM22-FW-E



LCM22-FW-E-T



LCM22-FW



LCM22-FW-EC



LCM25-FJ-E



LCM25-FJ-D



LCM25-BJ



LCM25-HJ



LCM25-FJ-C



LCM25-FJ-EC



LCM25-FJ



LCM25-HJ-E-1



LCM25-FW-E



LCM25-FW-EC



LCM28-BJ



LCM28-FJ-D



LCM28-HJ



LCM28-FJ



LCM28-FJ-E



LCM28-FW-E



LCM28-FJ-E-1



LCM28-FW-EC



LCM30-BJ



LCM30-FJ-E



LCM30-HJ



LCM30-FJ



LCM30-FJ-D



LCM30-FJ-E-1



LCP30-FW-EC



LCP30-FW-E



LCM30-FW-E



LCM30-FW-EC



LCM40-FJ-E-1